


USE & CARE GUIDE

WATERWISE®
Model 8500™ Model 8800™

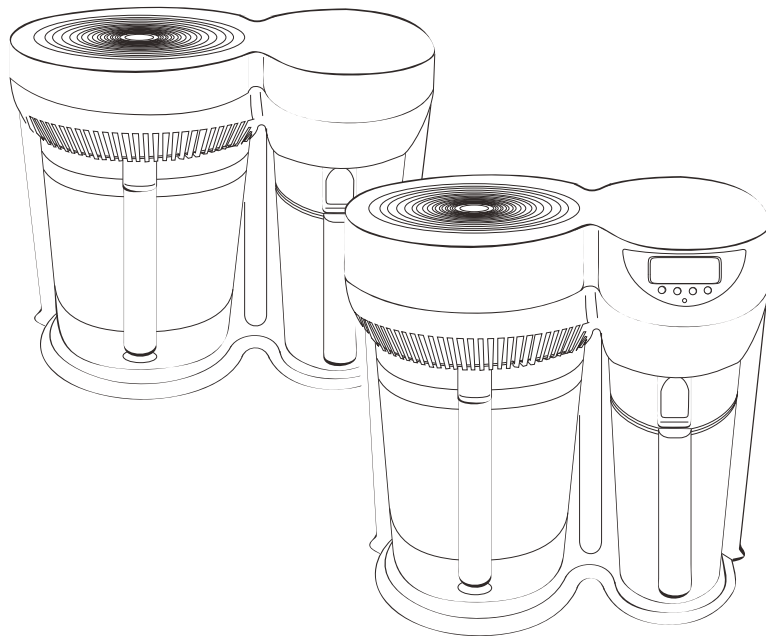

Countertop Purifier



*See Important
Safeguards on
page 2 & 3*

An exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



IMPORTANT SAFEGUARDS

SAVE THESE INSTRUCTIONS

When using this appliance, always adhere to basic safety precautions including the following:

1. **READ ALL INSTRUCTIONS BEFORE USE. FOR HOUSEHOLD USE ONLY.**
2. This Purifier is recommended for use with only potable water supplies. **DO NOT** attempt to make safe drinking water from nonpotable water sources.
3. This Purifier requires no special care other than general cleaning and periodic filter replacement (page 8-9). If servicing becomes necessary, please contact your authorized dealer or an authorized service facility. **DO NOT** attempt to repair Purifier yourself. There are **NO** user serviceable parts. See warranty for service details.
4. Operate in a well-ventilated area away from other heat sources. Keep Purifier at least 2 inches from walls or cabinets when in use. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
5. **DO NOT** touch hot surfaces. Although insulated, bottom of Purifier gets very warm during use. Be sure the surface it sits on is able to withstand heat.
6. Plug Purifier into a **GROUND**ED 120 volt electrical outlet only. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, the plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** modify the plug in anyway.
7. A short power supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
8. If an extension cord must be used, its marked electrical rating should be at least as great as the electrical rating of the Purifier.
9. **DO NOT** allow power cord or extension cord to hang over the edge of a counter or contact hot surfaces. **DO NOT** use Purifier if cord is damaged or defective.
10. To protect against fire, electrical shock, and injury to persons, **DO NOT** immerse power cord or Purifier in water or liquid.
11. Close supervision is necessary when this or any appliance is used by or near children. Hot boiling water will scald if spilled on skin.
12. Never remove the kettle cover while Purifier is operating. Let cool at least 30 minutes after a cycle is finished. Boiling water or steam can cause severe burns.

13. Unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
14. **DO NOT** plug steam vent on top of kettle cover.
15. **DO NOT** operate with a damaged cord or plug, after a malfunction, or if the Purifier has been damaged in any manner. Return to an authorized dealer or qualified service facility for examination, repair, or replacement.
16. **DO NOT** place too near an edge of the supported surface where Distiller can be bumped or be pulled down on someone.
17. Use **INDOORS** on a dry, level, well supported, stable surface. **DO NOT** use outdoors.
18. **DO NOT** use appliance for other than intended use.
19. Make sure collection/storage carafe is properly placed for water collection.
20. **DO NOT** move Purifier while it is operating or cooling.
21. **DO NOT** operate in a moving vehicle.
22. **DO NOT** operate Purifier without water in the kettle. Permanent damage may occur.
23. For good quality product water and to prevent overflow of the storage carafe, **DO NOT FILL THE KETTLE ABOVE THE "MAX" FILL LINE.**
24. Never remove the kettle while fan motor is running, or for at least 30 minutes after cycle is complete. **SEVERE BURNS CAN RESULT FROM BOILING WATER OR STEAM.**

PRODUCT SPECIFICATIONS


Model 8500	
Rating	120 VAC / 60 Hz / 500 W
Filling Volume	3 quarts
Production Capacity	.16 gallon/hour (.7 liter/hour), 4 gallons/day
Model 8800	
Rating	120 VAC / 60 Hz / 800 W
Filling Volume	1 gallon
Production Capacity	.25 gallon/hour (1 liter/hour), 6 gallons/day

These products conform to ANSI/NSF 62 for the specific performance claims as verified and substantiated by test data.

The physiological effects of the operation of this appliance, beneficial or otherwise, have not been investigated by Underwriters Laboratories Inc. See Product Data Sheet for test data obtained from an independent laboratory.

ELECTRONICS (MODEL 8800)

FIGURE 1

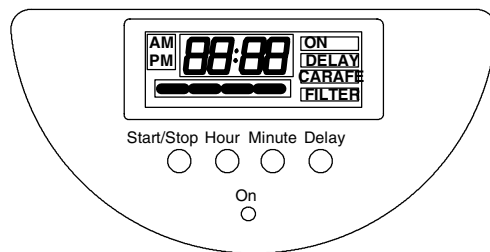

Control Buttons

From left to right the control buttons are Start/Stop, Hour, Minute, and Delay (fig. 1).

Time Setting

Time blinking in the display window indicates the power supply has been interrupted. After resetting, the time will continue to run and will appear continuously in display window.

Setting the Time Display

Hours

To move the hours forward by one hour, press the **Hour** button quickly once. To fast-forward the time, press for at least one second. After completion, the time display will blink for another 3 seconds before the time is finally set.

Minutes

To move the minutes forward by one minute, press the **Minute** button quickly once. To fast-forward the time, press for at least one second. After completion, the time display will blink for another 3 seconds before the time is finally set.

12-24 Hour Mode

Pressing the **Hour** and **Minute** buttons simultaneously for 5 seconds enables changeover from 12 hour mode to 24 hour mode (or from 24 hour mode to 12 hour mode). Further changeovers are only possible after 5 seconds (and only when the **Hour** and **Minute** buttons are pressed as described above). In the 12 hour mode the display shows AM or PM.

Setting the Display Function/Checking Delay Status

The Delay Function allows the Purifier to be programmed to start at a later time.

Setting

Press the **Delay** button once. The delay start time and **Delay** indicator appear in the display window.

Change the Delay Start Time as follows:

Hours

Press the **Hour** button once, after which the hour figure blinks for 3 seconds in the display window. During these 3 seconds, the hours can be forwarded by one hour by pressing the hour button once. By continuous pressing of the button, the time can be fast-forwarded.

Minutes

Press the **Minute** button once, after which the minutes figure blinks for 3 seconds in the display window. During these 3 seconds, the minutes can be forwarded by one minute by pressing the minute button once. By continuous pressing of the button, the time can be fast-forwarded.

If the time is correctly set, after three seconds the time reappears with **Delay** in the display. **Delay** indicates the delay time function is activated. To deactivate the delay time function, press the **Delay** button twice within a period of 3 seconds, or press the **Delay** button once while in delay mode. After completion, **Delay** will not appear next to the time in the display window.

Check Delay Time Status

Press the **Delay** button once. The delay start time appears in the display window with **Delay** in the display. After 3 seconds the current time reappears.

Switching the Purifier On/Off

To turn the Purifier on or off, press the **Start/Stop** button. When turning the Purifier on, **On** appears in the display window and the **On** (red) light appears. After turning the Purifier off, the **On** light turns off.

Carafe Indicator


If carafe is not in the correct position, the **On** light blinks and **Carafe** blinks in display window for 90 seconds. Then the unit will shut off. If carafe is removed from base unit during operation, the **Carafe** indicator will appear in display window for 90 seconds. At 90 seconds the unit will shut off. To restart, place carafe in position and press **Start/Stop**.

Kettle Indicator

If the kettle is removed during a cycle, the unit will shut off immediately. The On light will blink continuously if kettle is not correctly positioned.

Filter Status Indicator/Filter Change Indicator

FIGURE 2

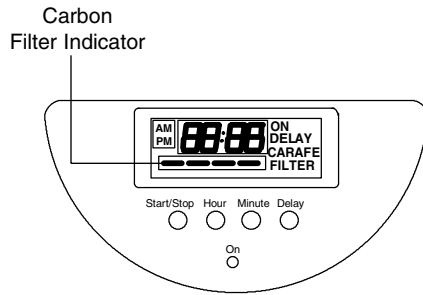

The Carbon Filter Indicator shows four status bars to indicate filter life (fig. 2). Four bars indicate a new filter and zero bars indicate that the filter needs to be changed. In addition to the bars the Filter indicator will flash in the display when the filter needs to be changed. To reset filter status, press and hold the Delay button for 7 seconds.

PREPARING FOR FIRST TIME USE

1. Set Purifier on a level countertop or table.
2. Remove kettle from its receptacle.
3. Remove kettle cover by twisting counterclockwise, then lift.
4. Wash inside of kettle with soap and water, rinse and fill the kettle with ordinary tap water to the Max line.
5. Replace the cover onto the kettle. Twist clockwise to lock. Plug the kettle into the base receptacle.
6. Wash and rinse carafe and lid with soap and water.
7. **IMPORTANT:** Before using carbon filter, rinse the filter with purified water for 30 seconds so it is wet on all surfaces. If filter ever dries out as a result of not using the purifier, remove and rinse so it is wet on all surfaces.


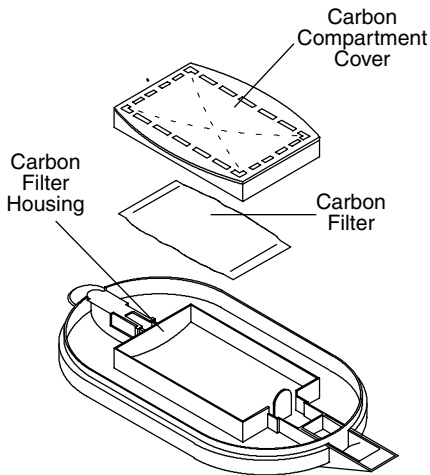


FIGURE 3

8. The carbon filter is packed in a separate plastic bag. Remove the cover of the carbon filter housing located inside the carafe lid. Remove carbon filter from bag and place into housing. Replace cover on housing, and replace lid on carafe (fig. 3).
9. Place the carafe on the base unit, and plug the power cord into wall outlet.
10. For Model 8500, press Reset button to turn the Purifier on (fig. 4 Model 8500). Run one batch of water into the carafe.
11. For Model 8800, press the Start/Stop button to turn Purifier on (fig. 4 Model 8800). Run one batch of water into carafe.
12. Let unit cool at least 30 minutes. Steam can cause severe burns.

Model 8500

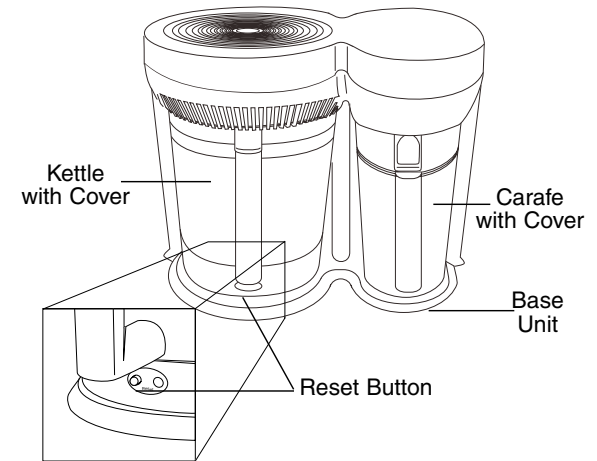

Model 8800

13. Unplug kettle from base unit and rinse well.
14. Discard the first batch of water which may have some harmless carbon fines (very fine black particles) in it from manufacturing and/or packaging.
15. Your Purifier is now ready for use.

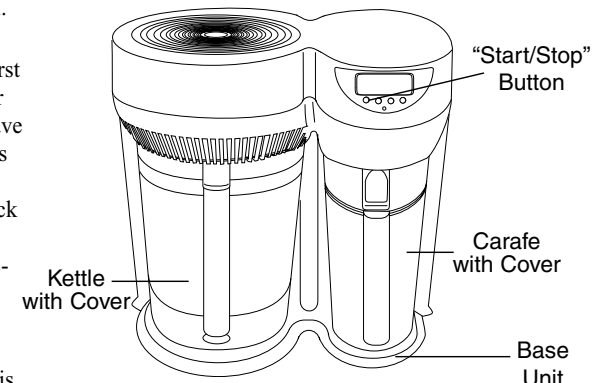


FIGURE 4

USING THE COUNTERTOP PURIFIER

1. Set Purifier on a level countertop or table.
2. Unplug the kettle from the base (fig. 4). Twist the cover counterclockwise to remove and set aside.
3. Rinse and fill the kettle with ordinary tap water to the Max fill line. **DO NOT** fill kettle above the Max fill line as the carafe will overflow.
4. Replace the cover on the kettle. Twist cover clockwise to lock. Plug the kettle into the base unit.
5. Set the carafe into place on base unit.
6. Plug the power cord into a **GROUND**ED 120 volt outlet.
7. Press the Reset (Model 8500) or Start (Model 8800) button. The On light will illuminate.

When the cycle is complete (approximately 5 hours for the Model 8500 and 4 hours for the Model 8800) the Purifier turns off automatically. **AFTER THE FAN MOTOR STOPS, WAIT AT LEAST 30 MINUTES BEFORE REMOVING THE KETTLE COVER.**



CAUTION: NEVER REMOVE THE KETTLE WHILE THE FAN MOTOR IS RUNNING, OR FOR 30 MINUTES AFTER IT STOPS. SEVERE BURNS CAN RESULT FROM BOILING WATER OR STEAM.

8. To pour water from carafe, open spout by pulling on center strip in direction of arrow indicator near thumb position.
9. Store the carafe filled with purified water in the refrigerator.
10. After the Purifier has cooled (wait 30 minutes after the fan motor stops running), remove the kettle to clean.

CHANGING THE CARBON FILTER

IMPORTANT: The Purifier uses a carbon filter in the carafe cover to remove traces of odors before the purified water is collected in carafe. The filter lasts about 2-3 months. A return of unwanted odor means the filter should be replaced. Order replacement carbon filters from the outlet where you purchased your Purifier.

To Replace Carbon Filter

The carbon filter is a final polishing filter for the Purifier. Unit may be operated with or without the carbon filter.

1. Remove the lid from the carafe.
2. Remove the carbon compartment cover by pulling on tabs.

3. Remove used carbon filter and discard. **DO NOT** reuse carbon filter.
4. Rinse inside of carbon compartment with water.
5. Remove carbon filter from plastic bag and rinse under purified water for 30 seconds so that it is wet on all surfaces.
6. Put new carbon filter in carbon compartment. Be sure carbon is evenly distributed within pouch.
7. Replace the carbon compartment cover and place the carafe lid on the carafe.
8. Replace carafe on base unit.
9. On Model 8800, be sure to reset the Filter Status Bar by pressing and holding the Delay button for 7 seconds.
10. The next time you make purified water, discard the first batch which may have small, harmless, carbon fines in it.

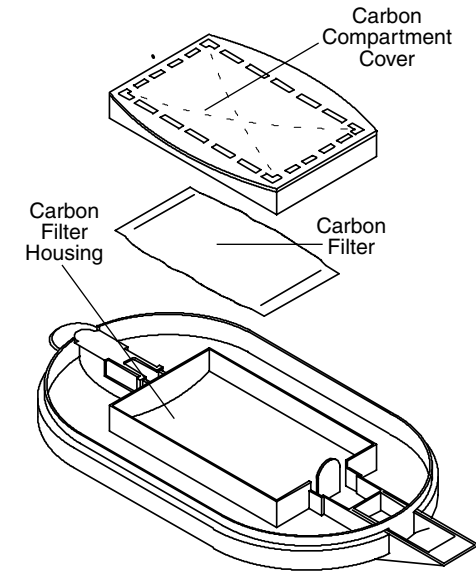


FIGURE 5

NOTE: The physiological effects of operation of this appliance, beneficial or otherwise, have not been investigated by Underwriters Laboratories Inc. See Product Data Sheet for test data obtained from an independent laboratory.

PURIFIER MAINTENANCE

Kettle

After each use, rinse the inside with lukewarm tap water and remove any loose residue. Clean by wiping out the inside of the kettle with a damp cloth and rinse. If a deposit starts to form at the bottom, use an approved cleaner/descaler, such as KLEENWISE, to remove deposits. **Residue buildup on the bottom of the kettle will prevent the system from purifying a complete batch of water.** Remove the kettle from base unit. Fill kettle with hot water and follow the instructions on the cleaner bottle. Use a soft plastic or nylon scouring pad if needed. **DO NOT** use abrasive cleaners, caustic acids, steel wool pads or metal utensils. Rinse thoroughly after cleaning. **DO NOT** operate Purifier with cleaning solution in kettle.

IMPORTANT: DO NOT IMMERSE THE PURIFIER OR KETTLE IN WATER.

Carafe

Clean with mild dish detergent and soft cloth. Rinse thoroughly with clean water. **DO NOT** use carafe to store liquids other than purified water. Other liquids may transfer a taste or odor.

Cleaning Exterior Surfaces

To keep your Purifier looking new, periodically clean the exterior plastic surfaces with a soft, damp cloth. **DO NOT** use any caustic cleaning solutions, scouring pads or powders because they will damage the plastic finish.

NOTE: There are no user serviceable parts inside unit.

TROUBLESHOOTING

Not Making Purified Water

1. Purifier power cord not plugged into electrical outlet.
2. No power to electrical outlet.
3. Kettle not plugged into base receptacle.
4. Did not press Reset or Start/Stop button to start cycle.
5. Did not fill the kettle with water.
6. Carafe is not in place.*

Not Making Enough Water Each Batch

1. Did not fill kettle with water to Max fill line.
2. Carafe is not in correct position.
3. Kettle cover is not locked into position.
4. Kettle bottom has residue buildup.

Flashing Indicator

1. Carafe flashing in display indicates carafe is not in position.*
2. Flashing On light indicates kettle is not in position.*
3. Filter flashing in display indicates filter needs changing.*
4. Time flashing in display indicates power supply has been interrupted.*

Water Leaks

1. Water receptacle in carafe cover is not open.
2. Carafe cover is not in place.
3. Carafe is not in place.

*Model 8800 only

REPLACEMENT PARTS

Description	Part Number
Model 8500 3 qt. Replacement Carafe (Opaque)	8550
Model 8800 1 Gallon Replacement Carafe (Clear)	8850
Carbon Filter Replacement Single	8601
Carbon Filter Replacement 6 pack	8606
Cleaner/Descaler	1003
Gasket for Kettle	8645

PRACTICAL USES FOR CLEAN, PURE DISTILLED WATER

Drinking	it s healthy and delicious
Coffee	you ll use less
Tea, Cocoa	incomparable
Ice Cubes	you ll see the difference
Cooking	taste the improvement
Low Sodium Diets	essential
Steam Irons	last longer
Humidifiers	healthier
Fruit Juices	like freshly squeezed
House Plants	they ll thrive now
Aquariums	clean and clear
Wet Cell Batteries	pure power
Photography	perfect development
Baby Formulas	pure contentment
Feminine Hygiene	sanitary
Complexion Care	feel the difference
Pet Care	they ll love you
Sprouting	grow like crazy
Fasting	great for cleansing

and many other uses you will discover

WARRANTY REGISTRATION CARD

Please fill out and return the enclosed registration card. Returning this card will not affect warranty coverage, but may expedite the processing of a warranty claim. Returning this card is the only way to guarantee you will be notified by Waterwise of any issues that arise concerning this product. The additional information will also help us to develop new products that best meet your needs and desires. Thank you!

OWNER'S LIMITED WARRANTY

Waterwise warrants, to the original purchaser, this product against defects in materials and workmanship, excluding the disposable carbon filter and gasket, for a period of one (1) year from the date of purchase. Defects or failures due to shipping/handling, improper use or maintenance, including abuse or neglect, normal wear, water conditions, accidents, alterations or modifications, or unauthorized repair are specifically excluded from this warranty. No dealer, distributor, agent, representative, or other person is authorized to extend or expand this warranty.

Waterwise is not responsible or liable for personal injury, property damage, or incidental or consequential damages arising out of, or in connection with, the use or performance of the product or other damages with respect to loss of use, or costs of removal, installation, or reinstallation.

Waterwise will, at its option, replace or repair the defective part(s) without charge, provided they are returned, transportation prepaid by owner, to an authorized service facility or to the address below. Enclose a letter describing the problem, copy of dated proof of purchase, and your name, address and daytime telephone number.

This limited warranty does not guarantee uninterrupted service. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. This limited warranty is in lieu of all other warranties, expressed or implied, including, but not limited to, any implied warranty of merchantability or fitness for a particular use or purpose. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

Outside the United States, a different warranty may apply. For details, please contact your authorized Waterwise distributor.



3608 Parkway Blvd • Leesburg Florida 34748-9399 • (352) 787-5008 • Fax: (352) 787-8123
www.waterwise.com • E-mail: service@waterwise.com